

# PELA™

## How to use your Pela 2000 or 6000 Oil Extractor

Included you should find the following.

- Container



- Black Rubber Cap or Top Hat



- Pump Handle



& Pump



- Tubeset



Main connector hose & dipstick tube

- Pouring Spout



\*\*If there are any of the above parts missing on purchase please contact your supplier as soon as possible.

## Getting started...

Remove all items from the box. Attach the pump handle to the pump.

1. Connect the tubeset by firmly placing red cap on spout of the container. Insert the other end of the tube into the dipstick pipe, ensuring it reaches the bottom.
2. If the top hat is not already attached, place onto the top of the container and push down firmly until attached.
3. Place pump onto the top hat. Holding the grey part of the pump onto the top hat, use the handle to move the pump up and down, 5 to 10 times (Pela 2000) 10 to 20 times (Pela 6000).
4. Thus creating a vacuum for the fluid being removed to be sucked up the tubeset into the container.
5. Once fluid has been removed, detach tubeset and place pouring spout onto spout of container and dispose of fluid appropriately.

If you have any problems please contact 01796 482 104 to discuss the difficulties you are experiencing, and in most cases we are able to provide the solution.

## Troubleshooting Tips:

- OIL TEMPERATURE ; The oil should be warm when removing it with your Pela Oil Extractor however, never have the oil HOT.
- LOSS OF SUCTION ; If you are experiencing loss of suction, make sure the Top Hat is firmly attached.
- SPARE PARTS ; Such as replacement Tubesets are available from your supplier.