

# PELA<sup>TM</sup>

## How to use your Pela 400, Pela 650 or Pela Pro 14 Oil Extractor

Included you should find the following.

- Container



- Tubeset



Main connector hose & 2 dipstick tubes.

**\*\*If there are any of the above parts missing on purchase please contact your supplier as soon as possible.**

### Getting started

Remove all items from the box.

1. Connect the tubeset by firmly placing black connector on the end of the tubeset into the spout of the container. Select the appropriate diameter dipstick tube and connect to the main hose. Insert the other end of the dipstick tube into the dipstick pipe, ensuring it reaches the bottom.
2. Use the handle to move the pump up and down, several times.
3. Thus creating a vacuum for the fluid being removed to be sucked up the tubeset into the container.
4. Once fluid has been removed, detach tubeset and dispose of fluid appropriately.

If you have any problems please contact 01796 482 104 to discuss the difficulties you are experiencing, and in most cases we are able to provide the solution.

### Troubleshooting Tips:

- **OIL TEMPERATURE** - The oil should be warm when removing it with your Pela Oil Extractor however, **never** have the oil **HOT**.
- **LOSS OF SUCTION** - If you are experiencing loss of suction, make sure the black connector is firmly attached.
- **SPARE PARTS** - Such as replacement tubesets are available from your supplier.